

Installation Instructions

03-0206 SpeedyMoto Ducati Monster Top Triple Clamp

Fits 2002 - current 620, 750, 800, 900, 1000

Parts included


- 1. One SpeedyMoto top triple clamp
- 2. Three stainless M8 x 18 mm Allen head bolts (Fitted)

Tools required

- 1. 6 mm Allen wrench
- 2. 8 mm Open-end wrench
- 3. Dead-blow mallet
- 4. Torque wrench

Installation


- 1. Remove fairing (if applicable).
- 2. Remove instrument pod.
- 3. Remove stock bar clamps and risers. Take note of their original orientation for proper reassembly in step 11.
- 4. Swing handlebar and cables away from top triple clamp area.
- 5. Loosen nuts holding wiring harness frame, behind headlight bucket, to unhook harness frame from instrument pod vibration damper pads.
- 6. Unscrew and retain vibration damper pads for use on the SpeedyMoto triple clamp.
- 7. Loosen all 3 bolts from top triple clamp.
- 8. Remove stock top triple clamp by gently tapping the bottom of the clamp. Be mindful to tap evenly around all edges of the bottom of the clamp.
- 9. Center SpeedyMoto top triple clamp onto forks and steering stem nut.
- 10. Carefully tap down SpeedyMoto top triple clamp until fully seated. Be mindful to tap evenly across the entire surface.
- 11. Torque all 3 bolts to 14 Nm (~10.5 Ft. Lbs.).
- 12. Swing handlebar back into position.
- 13. Reassemble stock risers and clamps, onto the handlebar and SpeedyMoto top triple clamp.
- 14. Slightly tighten bar clamp bolts. Adjust handlebar position for your usual riding position. Torque bar clamp bolts to 10 Nm (~7.5 Ft. Lbs.), Note that you will need to tighten the top two bolts first for proper torquing.
- 15. Reassemble wiring harness frame back onto the instrument pod vibration damper pads. Tighten nuts holding harness frame, found behind headlight bucket.
- 16. Reassemble instrument pod.
- 17. Reassemble fairing (if applicable).
- 18. Do a pre-flight check: Turn the handlebars to extreme left, then right while twisting the throttle. Make sure that the throttle freely rotates from stop to stop. Also make sure of proper cable slack.
- 19. Ride it, and tell all your friends about SpeedyMoto!

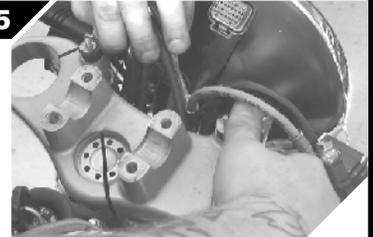5**15**



939 SE ALDER ST. SUITE 4 PORTLAND OREGON 97214

503-445-4368 FAX 503-239-5426 WWW.SPEEDYMOTO.COM

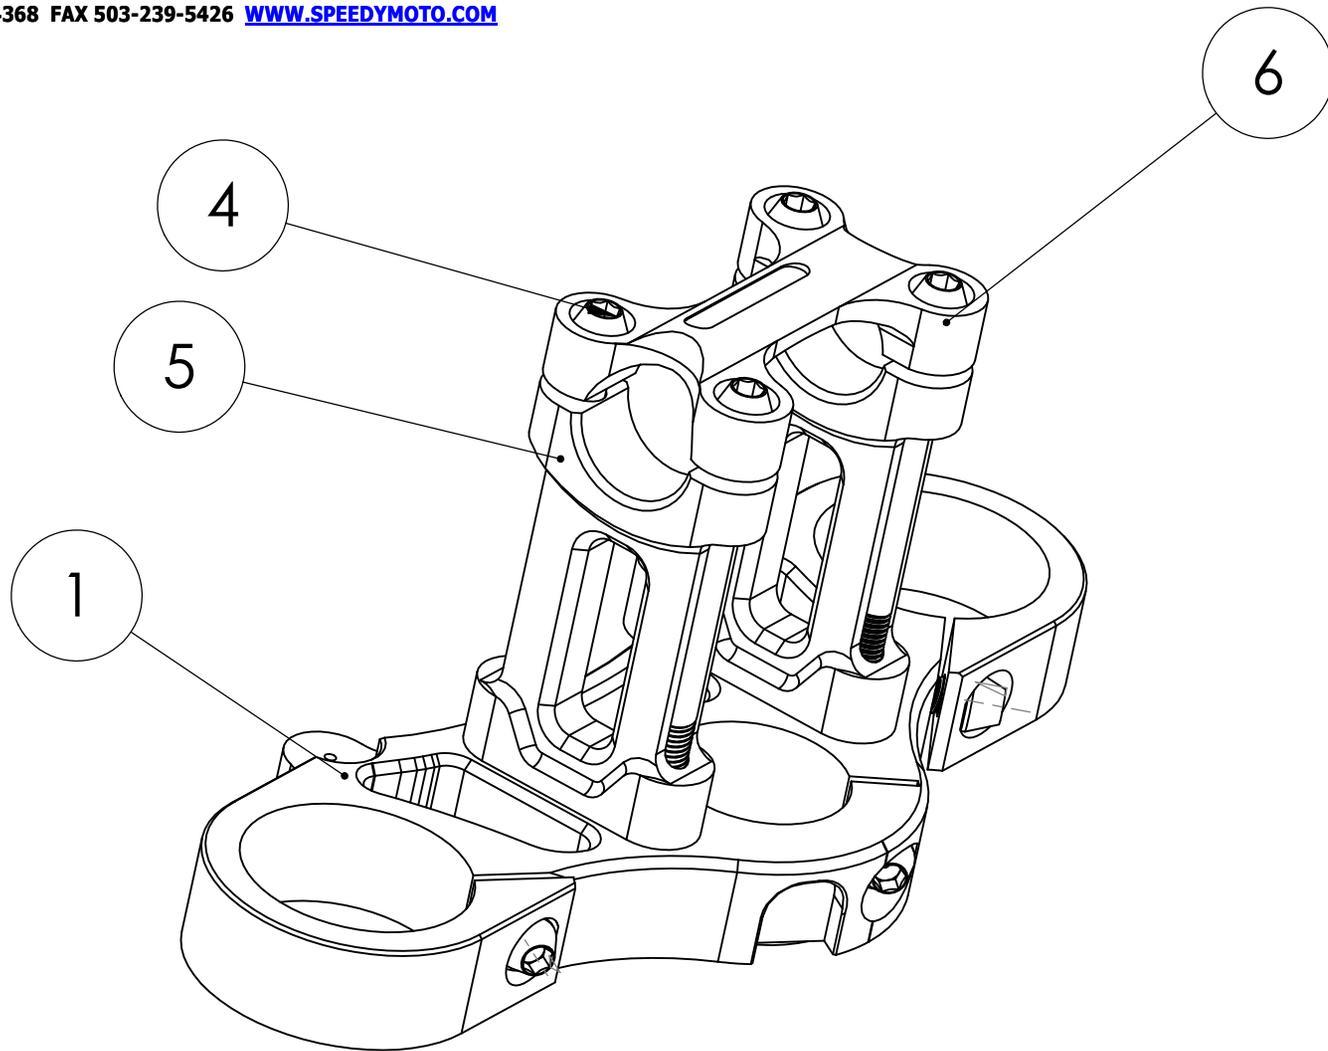



939 SE ALDER ST. SUITE 4 PORTLAND OREGON 97214

503-445-4368 FAX 503-239-5426 WWW.SPEEDYMOTO.COM

ITEM NO.	PART NUMBER	CUSTOMER/QTY.
1	MONSTER BODY 03-0206	1
2	M8X18	2
3	ROLLPIN	2
4	M8 X 100	4
5	RISERS 03-0220	2
6	TOP CAP 03-0216	1
7	M8X25	1

